


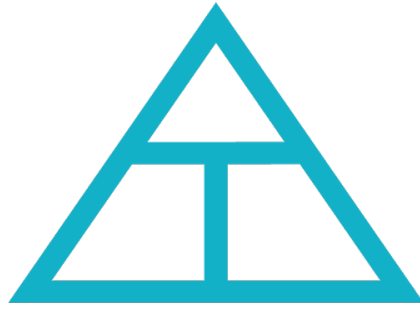

TENT & TRAIL

Adventure Lite Series Roof Tent Installation & User Guide

Make sure to read this document fully before attempting to install or use your roof tent.



WARNING

Improper installation or use of your roof tent may result in serious injury or death. Follow these installation instructions carefully to ensure proper installation on your vehicle and safe use of your tent. Please check with your vehicle manufacturer for specified loading capacity of your roof rack or roof bars.

- Please apply a small amount of grease to threads of bolts for ease of use and durability.
- Please make sure all securing nuts are tightened properly before driving the car.
- Please make sure the roof tent is closed and secured properly before driving the car.
- Please make sure your max. speed does not exceed 70mph with the roof tent fitted to vehicle.
- Please make sure to air and dry out roof tent within 72hrs if packed away wet.
- Please make sure the roof tent including the fabrics, mattress etc. are dried completely before leaving the tent closed for any long periods of time.

See our latest roof tent installation guides here:
<https://tentandtrail.com/roof-tents/roof-tent-installation/>

1. Carefully unbox your roof tent. Lay the roof tent box down, cut the straps and lift off the cardboard box top. Remove any other packaging and wrapping to give you good access to the tent.

When using a knife to open the packaging, be careful NOT TO CUT THE ROOF TENT!



2. If you are not installing cargo bars, skip to Step 4. To install the cargo bars, begin by carefully unpacking the contents of the cargo bars box.

Insert 2 x M8 slim nuts into the top channel along the side of the roof tent. Position a cargo bar foot so the two nuts align with the lower holes. Secure the foot in place using 2 x M8 Allen cap bolts, tightening them gently with the provided Allen key, **do not over tighten**. Repeat the process on the opposite side, ensuring the feet are aligned directly across from each other.

3. Insert 2 x M8 20mm bolts into the channel on the underside of the cargo bar, one each end to align with bar feet. Place the cargo bar onto the feet and secure the bar with M8 nylon nut.

Repeat this process with the other cargo bar and tighten all M8 nylon nuts with a 13mm spanner until secure, **do not over tighten**.



4. Carefully unbox the ladder packaging, as it contains the fitting kit box. Inside the fitting kit box, you'll find all the necessary hardware and tools required to securely fit your roof tent to your vehicle.

Ensure you keep all components organised for a smooth installation process.

5. Carefully lift and place the roof tent onto your vehicle's roof bars or roof rack (this will require two people to lift the tent safely). Ensure the mounting rails are positioned perpendicular to the bars they will mount to.

To have the roof tent open towards the rear of the vehicle, align the hinge at the front of the vehicle.
Adjust the placement as needed to ensure even weight distribution and a secure fit.



6. Assemble the aluminium sliding plates with the M8 50mm bolts. Carefully insert the sliding plates into the mounting rail located underneath the roof tent. Position two sliders with bolts on either side of each roof bar at the four designated mounting locations.

Ensure they are evenly spaced and aligned for secure attachment.

7. Place the steel mounting plate against the underside of the roof bar, aligning it with the protruding 50mm bolts. Thread an M8 washer and nut onto each bolt. Using the provided 13mm spanner, tighten all eight bolts securely and evenly to ensure a stable and firm attachment of the roof tent to the roof bars.

Check all the mounting bolts and brackets periodically during the use of your roof tent to ensure they are securely fastened to your rack system.



8. Ensure the roof tent is properly aligned and securely positioned on the roof bars. Double-check that all eight bolts are tightened evenly and firmly.

Once confirmed, insert the plastic end caps into both ends of the mounting rail to complete the installation.

Adventure Lite Series Roof Tent

Setup Guide

1. Insert the 2 x removable ladder hooks into the Kador strip located at the base of the roof tent at your chosen entrance. Secure the ladder onto the two hooks. Release the holding Velcro strap and extend the ladder downwards from the bottom, **ensuring the locking pins in each section engage at the required height.**
2. Unlock / release the two external clasps at the rear of the roof tent, then lift the handle to begin opening the tent. Once lifted, the gas struts will engage and automatically open the roof tent, making setup quick and effortless.
3. Unzip the bug net and internal canvas door to access the inside of the tent. Locate the long slim bag containing the 4 flexible rainfly awning rods. Remove the rods from the bag and insert them into the designated holes—two on each side and two at the back—on the base of the roof tent.

Ensure the poles are fully slotted into the holes to provide proper tension on the rainfly for optimal protection.

4. To add the awning extension, zip it securely into the rainfly. Position the two adjustable poles at the rear of the awning extension, insert them through the eyelets, and adjust to the desired height and angle. Attach the two longer guy ropes to the protruding tips of the poles, then peg them into the ground for stability. Use the two shorter guy ropes to secure the sides of the awning extension and peg them into the ground.

Ensure all ropes are tightened using the tensioners for maximum stability. In very windy conditions, remove the awning extension to prevent potential damage.

5. Happy camping!

If you have any questions or queries about any of the steps in this guide feel free to contact us at:
support@tentandtrail.com or 01264 604 972.