




TENT & TRAIL

Discover Series Roof Tent Installation & User Guide

Make sure to read this document fully before attempting to install or use your roof tent.

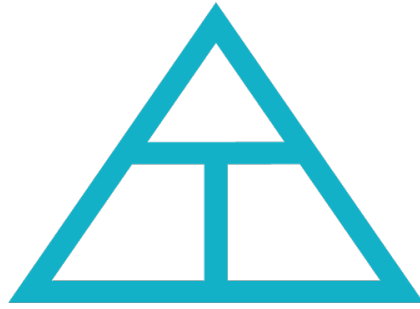

WARNING


Improper installation or use of your roof tent may result in serious injury or death. Follow these installation instructions carefully to ensure proper installation on your vehicle and safe use of your tent. Please check with your vehicle manufacturer for specified loading capacity of your roof rack or roof bars.

- Please apply a small amount of grease to threads of bolts for easy of use and durability.
- Please make sure all securing nuts are tightened properly before driving the car.
- Please make sure the roof tent is closed and secured properly before driving the car.
- Please make sure your max. speed does not exceed 70mph with the roof tent fitted to vehicle.
- Please make sure to air and dry out roof tent within 72hrs if packed away wet.
- Please make sure the roof tent including the fabrics, mattress etc. are dried completely before leaving the tent closed for any long periods of time.

1. Carefully unbox your roof tent. Lay the roof tent down, cut straps and lift off cardboard box top. Remove any other packaging and lift the roof tent out of the bottom half of the cardboard box. Be careful **NOT TO CUT THE ROOF TENT!**





2. Lay the tent down with logos the correct way up. Release the Velcro strips around the sides, to fold back the middle cover. Release clips at front corners and then partially open tent to remove the tent parts.

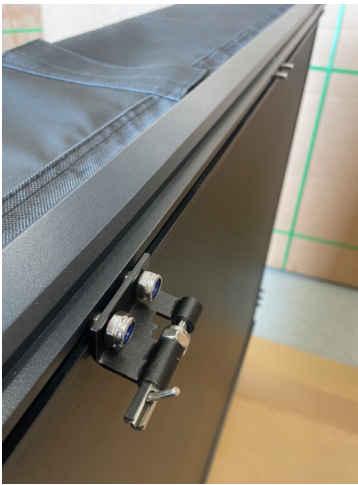

3. Locate the installation box and find the 2 x ladder clips and 4 x M8 16mm bolts. Slide the bolt heads into the cargo mount rail on the top of the tent, and make sure to mount the ladder clips on the opening of the roof tent (non-hinge side). Use the ladder as a reference for how wide to mount the locking clips.

4. Using the 13mm spanner that can be found in the cargo bars box, tighten with M8 nylon nuts until secure. **Do not over tighten nuts.**

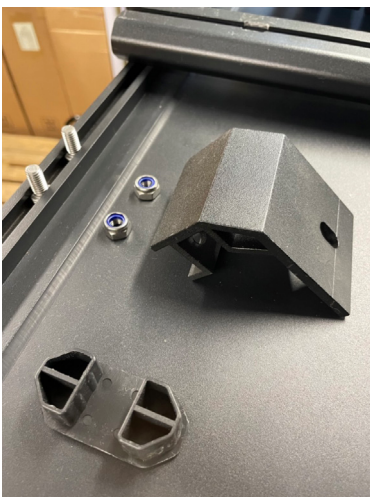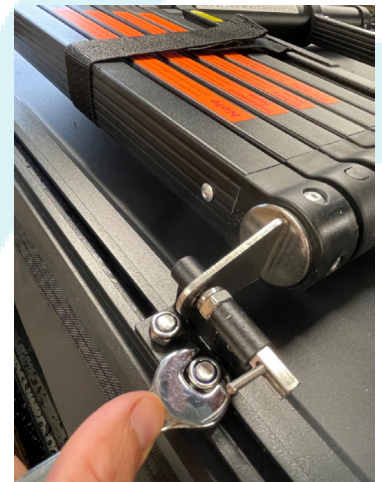


5. If you are not installing cargo bars, go to **Step 7**. To install the cargo bars, insert 2 x M8 16mm bolts into the mounting rail on top of the tent. Place a cargo rail foot over the 2 bolts and repeat on the opposite side so the feet are aligned opposite each other.

6. Insert 2 x M8 20mm bolts into the channel on the underside of the cargo bar, one in each end to align with bar feet. Place the cargo bar onto the feet and secure the bar with a penny washer and M8 nylon nut. Repeat this process with the other cargo bar and tighten all M8 nylon nuts with the spanner until secure, **do not over tighten**.



7. Place the roof tent onto your vehicle's roof bars or roof rack, the mounting rails should be perpendicular to the bars they will mount to. Position the hinge so that the tent will open to the desired side.

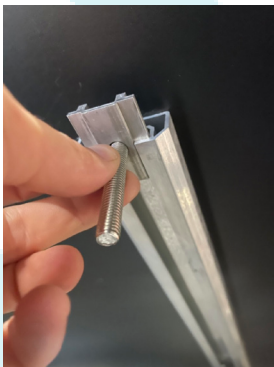


8. Assemble the aluminium sliding plates and M8 50mm bolts. Insert sliding plates into the mounting rail underneath the roof tent, on either side of the roof bars at the 4 mounting locations.

9. Place the steel mounting plate up against the roof bar and thread on a washer and nut onto protruding 50mm bolts. Tighten all eight bolts securely with the provided 13mm spanner. **Check all the mounting bolts and brackets periodically during the use of your roof tent to ensure they are securely fastened to your rack system.**



10. Check the roof tent is positioned correctly and all eight bolts are tightened securely, insert plastic end caps into the ends of the mounting rail.

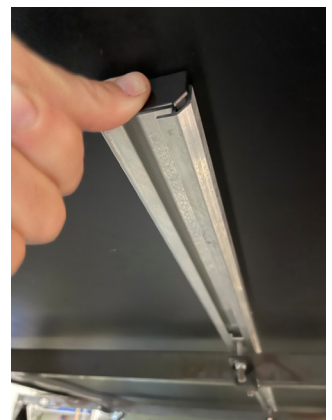

Discover Series Roof Tent

Setup Guide

1. Secure the ladder into position via the two spring clips. Release the holding Velcro strap and extend ladder from the bottom, until the locking pins in each section engage to required height.
2. Release the middle tent cover via Velcro strips around the base of the tent. Fold back the middle cover and release internal clips at front corners, (non-hinge side).
3. Use the ladder as leverage to open the tent by pulling down and then walking back until the ladder rests firmly on the ground. Ensure all the steps on the telescopic ladder are locked. The tent base should be level and the ladder should form a support for the end of the tent base. **Make sure the middle cover is folded down and not trapped in the hinge of the tent.**
4. To adjust the ladder height, start with the top section, pressing the two buttons under the ladder rung to release the locking levers. Slide the ladder up so that it recedes into the top rung. Repeat for each section until the ladder is the desired height. **Be sure that the remaining sections of the ladder are fully locked and the tent base is supported.**
5. Extend entrance awning by releasing the clamps to slide the frame out until awning is fully extended, then close the clamps to secure position.
6. Add the optional awning extension by zipping the awning extension into the front entrance awning. Position the two adjustable poles at the end of the awning and adjust to desired height and angle. Using the two longer guy ropes, attach to the protruding tips of the poles and peg into the ground. Use the two shorter guy ropes to secure the side of awning extension and peg into ground. **Make sure all ropes are tight and secure via the tensioner. Remove awning extension in very windy conditions to avoid damage.**
7. Happy camping!

If you have any questions or queries about any of the steps in this guide feel free to contact us at:
support@tentandtrail.com or 01264 604 972.